


Easy opening ends afford convenience for canned foods as the can be may opened effortlessly, without the need for can openers, knives or other utensils. The correct opening procedure must be used so as not to break the ring pull tab that facilitates the opening; and care must be taken to ensure that the sharp edges do not cause injury.

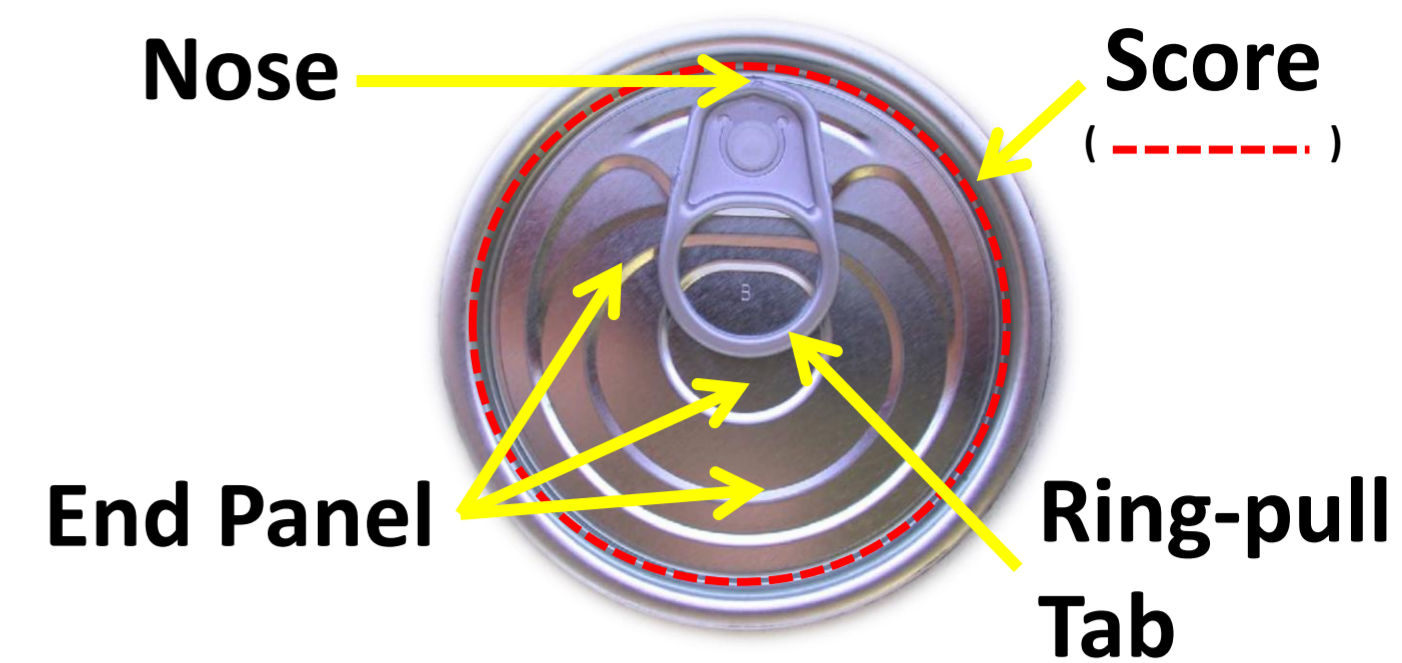

Photograph of an Easy Opening End showing the important features used in opening

5-Step Process



1. Gain access to the ring pull tab feature and lift it at 90° or just more, to the end panel.



2. As you lift the ring pull tab at 90° to the end panel, the “nose” of the tab will break the score area / line that continues all the way around the circumference of the end panel.



3. Once the score is broken, pull the tab (and end) away from the opened area in a lifting motion.



4. Peel the end panel open.



5. Lift the end panel off the can completely taking care not to cut yourself the sharp edges.